

Care instructions

Printed boards



1. To Prevent spreading the written ink, only wipe when it's completely dry. This is crucial with lacquered and printed boards because the solvents in the ink will cause damage to the board surface.
2. Only wipe dry ink with a clean felt or paper wiper suitable for whiteboards.
3. Daily clean the board with special cleaning spray for printed boards to maintain a good erasability.
4. Never use other cleaning agencies than real whiteboard cleaners. Agressive cleaners will cause permanent damage to the board surface.
5. When a wrong marker (flipchart marker, permanent marker) is used by accident: immediately clean the board with special cleaning spray for printed boards and a microfiber cloth. If that doesn't help, write over the written text with a whiteboard marker until it desolves. Clean the board with cleaning spray afterwards.
6. Note! Some markers - even those of renowned brands - are porly erasable, especially green and red.